

1 AMERICAN GAMES  
AccuCounter V1.2

POWER-UP SCREEN (VISIBLE FOR 4 SEC.)  
NOTICE THE VERSION No. LOWER RIGHT CORNER.  
THIS WILL HELP THE SERVICE PERSONNEL.

2 BATCH SIZE ###  
SECONDS DELAY ##

ENTER THE BATCH QUANTITY FROM KEYPAD 1-100 (PRESS ENTER).  
ENTER THE DELAY BETWEEN BATCHES 01-59 SECONDS (PRESS ENTER).  
WHEN DELAY TIME IS ENTERED SCREEN 4 WILL APPEAR.

3 BATCH SIZE ###  
SINGLE BATCH ON

ENTER THE BATCH QUANTITY FROM KEYPAD (PRESS ENTER).  
SCREEN 4 WILL APPEAR.

4 BATCH CNT ###  
TOTAL CNT #####

PRESS START/STOP BOTTOM TO DISPENSE TICKETS.  
PRESS UP ARROW TO GO TO PREVIOUS SCREEN.  
PRESS DOWN ARROW TO GO TO SCREEN 5.

5 SINGLE BATCH =1  
TIMED BATCHES=2

CHOOSE HOW YOU WANT THE MACHINE TO OPERATE.  
SINGLE BATCH PRESS 1 - SCREEN 3 WILL APPEAR.  
SINGLE BATCH - PRESS START BUTTON FOR EACH BATCH.  
TIMED BATCHES PRESS 2 - SCREEN 2 WILL APPEAR.  
ON POWER-UP MACHINE WILL BE IN TIMED BATCH MODE.

PRESSING UP-ARROW WILL RETURN TO PREVIOUS SCREEN.  
PRESSING DOWN ARROW WILL GO TO SCREEN 6 (COUNT TO DATE).

6 COUNT TO DATE  
#####X32000


PRESSING ARROW-UP WILL GO TO SCREEN 5 (SINGLE OR TIMED BATCH).  
PRESSING DOWN ARROW WILL GO TO SCREEN 7 (BATCHES TO DATE).

7 BATCHES TO DATE  
#####X32000

PRESSING UP-ARROW WILL GO TO SCREEN 6 (COUNT TO DATE).  
PRESSING DOWN ARROW WILL GO TO SCREEN 8 (TICKET WIDTH)

8 TICKET WIDTH  
TIME: 00.##

ENTER TICKET WIDTH TIME FROM KEYPAD.  
LEADING ZEROS MUST BE ENTERED (PRESS ENTER).  
IF YOU WANT TO KEEP THE SAME NUMBERS (PRESS ENTER).  
SCREEN 4 WILL APPEAR WHEN ENTER IS PRESSED  
A 1 7/8" WIDE TICKET SHOULD BE SET AT 00.10  
SEE NOTE UNDER GAP NOT SENSED.

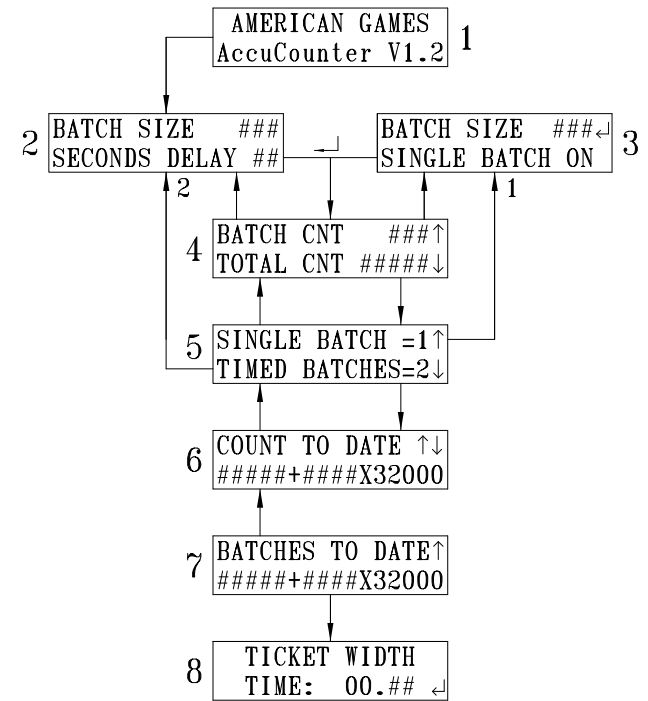

THIS SCREEN WILL APPEAR IF A GAP IS NOT SENSED BETWEEN TICKETS WITHIN THE TIME SET BY TICKET WIDTH.

A GAP IS REQUIRED BETWEEN TICKETS. IF THIS SCREEN APPEARS, AN EXTRA TICKET WILL PROBABLY BE IN THE DELIVERY HOPPER AND SHOULD BE RECOUNTED.

THE ABSENCE OF A GAP IS USUALLY CAUSED BY THE GAUGE BAR NOT SET PROPERLY.  
(SET GAUGE BAR TIGHTER)

PRESS UP ARROW TO RESET

NOTE: TICKET WIDTH TIME IS BASED ON 00.01 SECONDS PER 3/16" (.187)

1 7/8"	(1.87)	WIDE TICKET WOULD BE SET AT 00.10 SEC.
2 1/16"	(2.062)	WIDE TICKET WOULD BE SET AT 00.11 SEC.
2 1/4"	(2.25)	WIDE TICKET WOULD BE SET AT 00.12 SEC.
2 7/16"	(2.437)	WIDE TICKET WOULD BE SET AT 00.13 SEC.
2 5/8"	(2.626)	WIDE TICKET WOULD BE SET AT 00.14 SEC.
2 13/16"	(2.812)	WIDE TICKET WOULD BE SET AT 00.15 SEC.
3"	(3.0)	WIDE TICKET WOULD BE SET AT 00.16 SEC.

THIS FEATURE COULD BE DISABLED BY SETTING A LARGE NUMBER  
IN THE TICKET WIDTH SETTING. SUCH AS 02.00 SEC.